

モンキレンチ Hx

ADJUSTABLE WRENCH




ADJUSTABLE WRENCH(HX series)

- Wide open jaw. The size is JIS standard +@
- Adopting Square Screw to have less backlash.
- The end part is more sharp than our conventional products.

The Ultimate Standard Adjustable Wrench HX


ADJUSTABLE WRENCH

HX

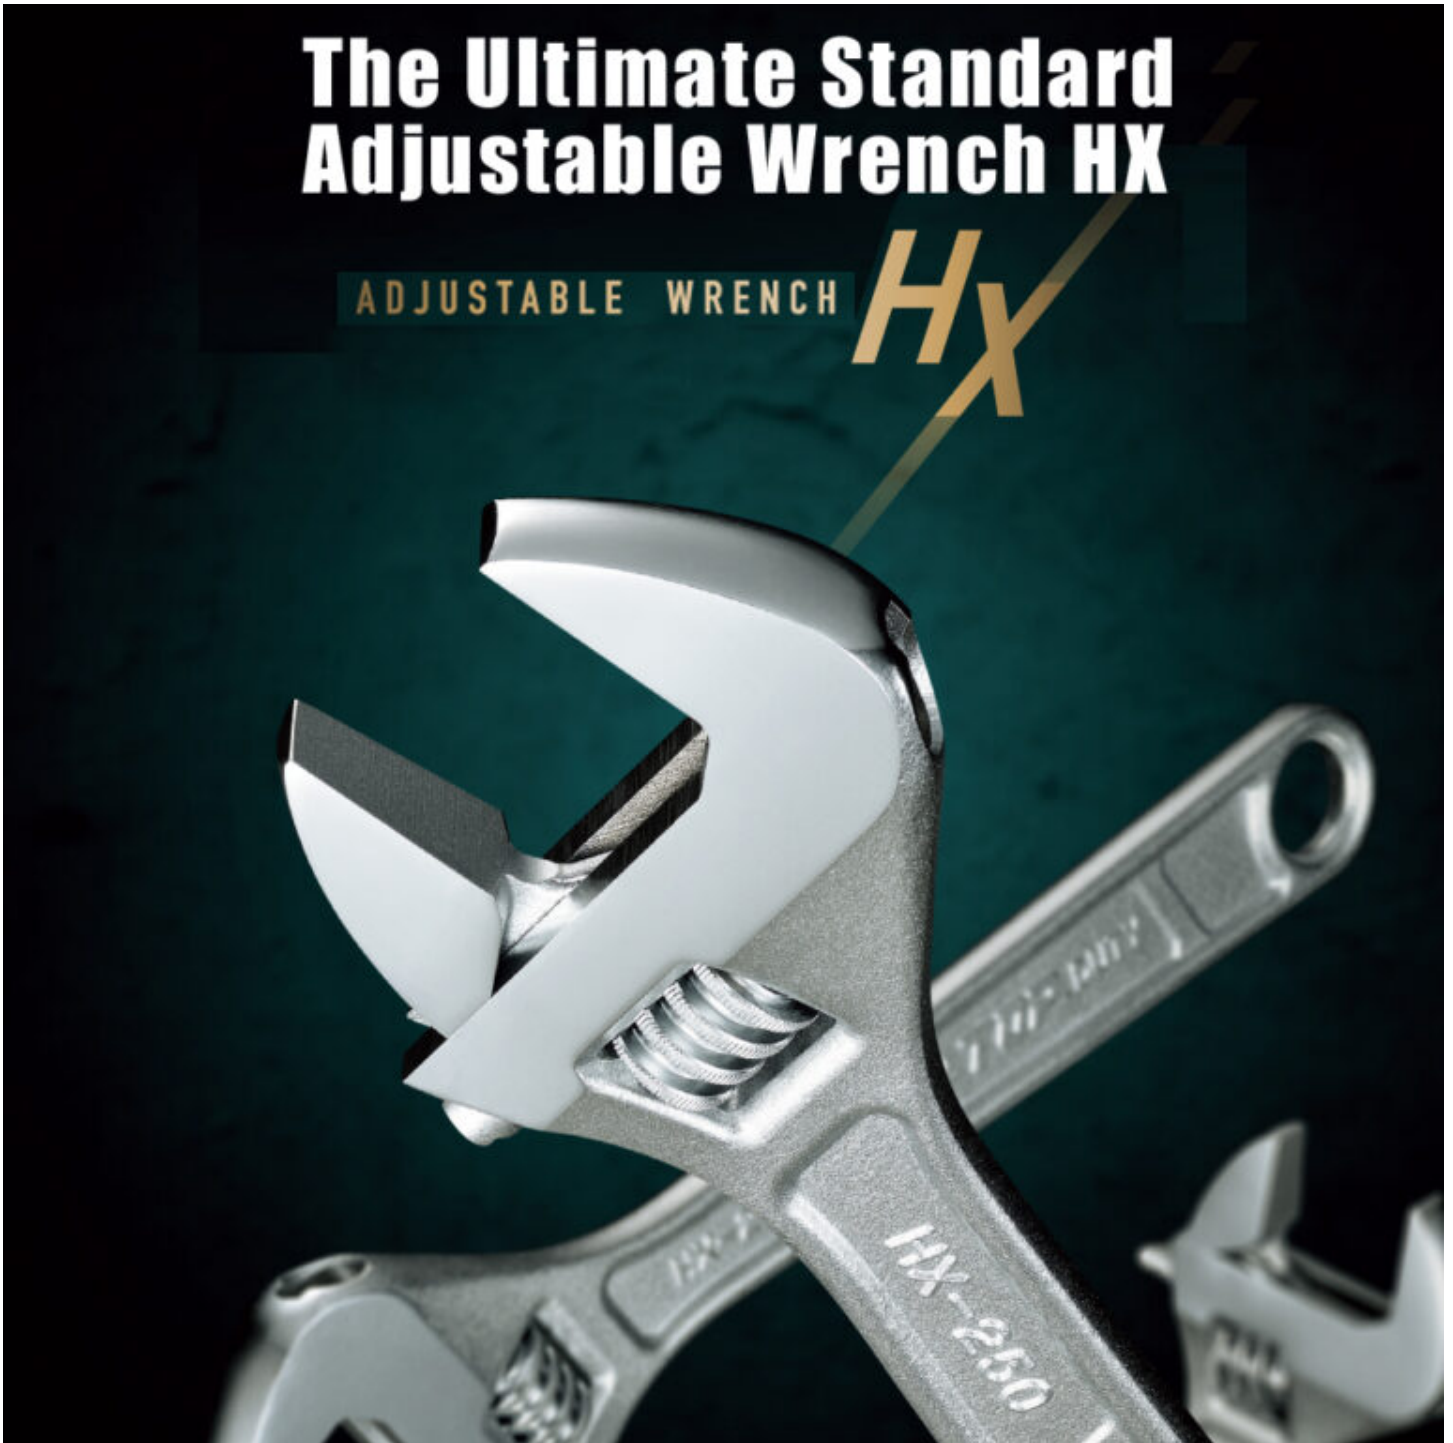

ADJUSTABLE WRENCH **Hx**

MADE IN JAPAN

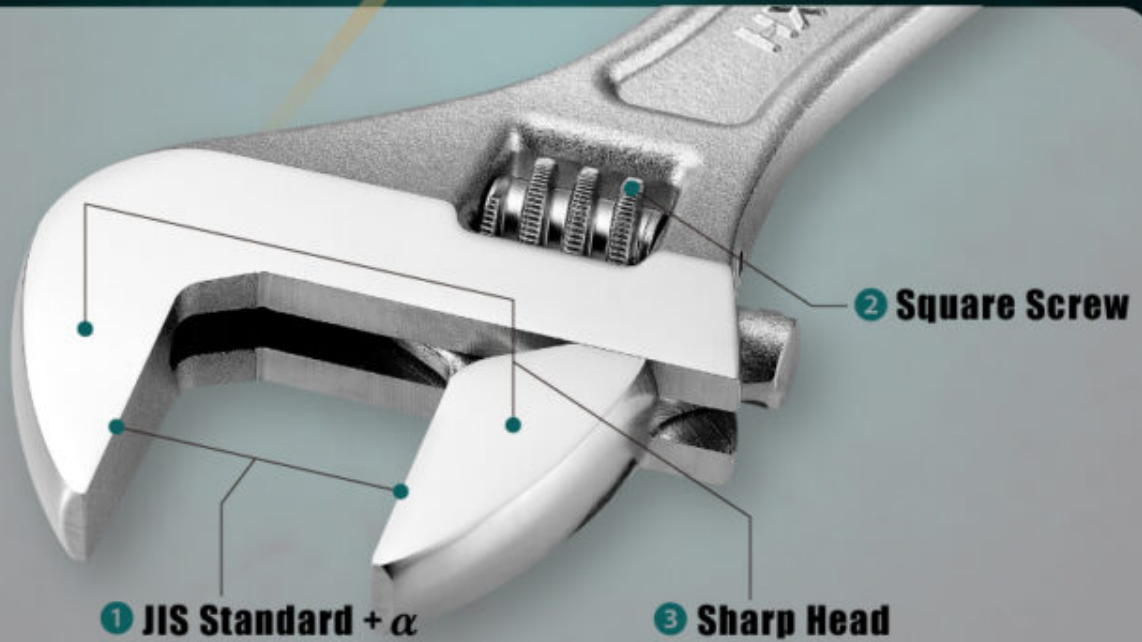

① JIS Standard + α


Add 3mm to HX-150,200,250, and add 4mm to HX-300, these are wider than JIS Standard.

② Square Screw



Adapting square to have less back lash.

③ Sharp Head

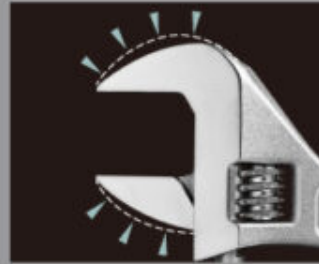

The end part is more sharper than our conventional products.

ADJUSTABLE WRENCH **Hx**

MADE IN JAPAN

JIS
Standard
+3mmOpen-Width
0~23mm

HX-150

JIS
Standard
+3mmOpen-Width
0~27mm

HX-200

JIS
Standard
+3mmOpen-Width
0~32mm

HX-250

JIS
Standard
+4mmOpen-Width
0~38mm

HX-300

TOP モンキレンチHX-これぞ、極上のスタンダード! トップ工業株式会社【 ...

PAGE TOP



■ Material : Cr-V

Item No.	Price (¥)	Opening Jaw Size (mm)	Weight (g)	Guaranteed Torque (N · m)	Package size (mm) H × W	Inner package	JANCode
HX-100	3,350	0~15	50	67.8	170 × 60	6	108043
HX-150	3,250	0~23	110	163.9	205 × 138	6	108128
HX-200	3,550	0~27	230	305.1	253 × 152	6	108203
HX-250	4,500	0~32	390	508.5	307 × 178	6	108395
HX-300	6,050	0~38	620	864.4	360 × 200	6	108470
HX-375	11,800	0~48	1,200	1,694.8	385 × 95	6	108555
HX-450	16,500	0~58	1,930	2,259.5			108630

Item No.	L (mm)	D (mm)	T1 (mm)	T2 (mm)	t (mm)
HX-100	110	33.5	5.5	8.5	5
HX-150	159	47	6	10	5.2
HX-200	208	57.5	7.5	13	6.7
HX-250	258	70	9	14.5	7.7
HX-300	308	83	10	17.5	9.2
HX-375	385	104	12	23	11
HX-450	465	120	15	27	13

Item No.	JIS Guaranteed Torque (N · m)	This Product Guaranteed Torque (N · m)	JIS Opening Jaw Size (mm)	This Product Opening Jaw Size (mm)	
HX-100	60.8	67.8	JIS Standard +7N · m	0~13	0~15 JIS Standard+2mm
HX-150	142.2	163.9	JIS Standard +21.7N · m	0~20	0~23 JIS Standard+3mm
HX-200	247.6	305.1	JIS Standard +30.5N · m	0~24	0~27 〃
HX-250	460.9	508.5	JIS Standard +47.6N · m	0~29	0~32 〃
HX-300	784.5	864.4	JIS Standard +79.9N · m	0~34	0~38 JIS Standard+4mm
HX-375	1,471	1,694.8	JIS Standard +223.8N · m	0~44	0~48 〃
HX-450		2,259.5			0~58

※JAN Codes are shown with 6 digital numbers which removed maker code (4975180).

※The price is for each unit.

Item No. HX-150 HX-200 HX-250 HX-300 HX-375 HX-450

a and b.



Use

For detaching/tightening bolts and nuts.

Caution

- Do not use by inserting pipe to the stick.
- Do not hit with a hammer.
- Do not use for purposes other than as hand tool.

> [Table for spring replacement](#)

> [Bolt and nut chart](#)

SHARE

Share

Tweet


Similar products



SHORT WORK WIDE WRENCH
(Backlashless Adjustable Wrench)



WORK WIDE WRENCH
(Backlashless Adjustable Wrench)

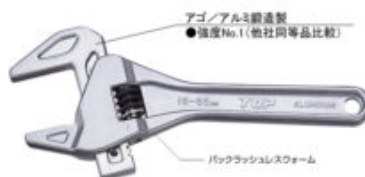

PAGE TOP

WORK WIDE WRENCH WITH GRIP
(Backlashless Adjustable Wrench)

TRAP WRENCH
(Vertical Aluminum Motor Wrench)

Joy of Making

TOP

TOP Kogyo Company, Ltd.

2190-5 Tsukanome, Sanjo City, Niigata, Japan 955-0055

TEL. +81-256-33-1681

FAX. +81-256-34-7617

Top Kogyo Co., Ltd. retains all rights to this web site's contents.

Use and/or reproduction of any the contents of this website without permission is strictly prohibited.

copyright © TOP KOGYO CO.,LTD. All rights reserved.



PAGE TOP