

RA BNC Male to BNC Female Adapter

RA BNC male to BNC female adapter part number SM3452 from Fairview Microwave is in-stock and ships same day. This Fairview BNC to BNC adapter has a male to female gender configuration. SM3452 BNC male to BNC female adapter operates to 1,000 MHz. This low profile right angle BNC adapter allows for easier connections in tight spaces. The Fairview Microwave RF adapter provides excellent VSWR of 1.2:1 maximum.

RF adapters can be used to enable connections between two connector types that would otherwise not mate. Certain RF adapter configurations can also be used to protect connectors on expensive equipment where the number of connect and disconnect cycles is high. An RF, microwave, or millimeter wave adapter is connected to the equipment and the commonly changed connection is made with the adapter which can be easily replaced when it wears out after high usage; such adapters are referred to as connector savers. Fairview Microwave also offers bulkhead, panel mount, hermetically sealed, reverse polarity, and isolated ground adapter varieties to serve all of your RF, microwave and millimeter wave needs.

Electrical Specifications

Description	Min	Typ	Max	Units
Frequency Range	DC		1,000	MHz
VSWR			1.2:1	
Operating Voltage (AC)			500	Vrms

Electrical Specification Notes:
 Values at 25°C, sea level.

Mechanical Specifications

Size	
Length	1.142 in [29.01 mm]
Width	0.972 in [24.69 mm]
Weight	0.04497 lbs [20.4 g]

Description	Connector 1	Connector 2
Type	BNC Male	BNC Female
Polarity	Standard	Standard
Interface Specification	MIL-STD-348A	MIL-STD-348A



Configuration:

- BNC Male Connector 1
- BNC Female Connector 2
- 50 Ohms
- Right Angle Body Geometry

Features:

- VSWR of 1.2:1 max up to 1,000 MHz
- BNC interface meets MIL-STD-348A
- 30 µin minimum contact plating
- Gold Plated Contact

Applications:

- General Purpose Test

Fairview Microwave
 1130 Junction Dr. #100
 Allen, TX 75013
 Tel: 1-800-715-4396 / (972) 649-6678
 Fax: (972) 649-6689
www.fairviewmicrowave.com
sales@fairviewmicrowave.com

Material Specifications

Description	Connector 1	Connector 2
Type	BNC Male	BNC Female
Contact Material	Brass	Beryllium Copper
Contact Plating	Gold	Gold
Contact Plating Spec.	30 µin minimum	30 µin minimum
Insulation Material	PTFE	PTFE
Outer Contact Material		Brass
Outer Contact Plating		Nickel
Outer Conductor Contact Spec.		100 µin minimum
Body Material	Brass	
Body Plating	Nickel	
Body Plating Spec.	100 µin minimum	
Coupling Nut Material	Brass	
Coupling Nut Plating	Nickel	
Coupling Nut Plating Spec.	100 µin minimum	

Environmental Specifications

Temperature

Operating Range


-20 to +80 deg C

Compliance Certifications (see [product page](#) for current document)

Plotted and Other Data

Notes:

Typical Performance Data

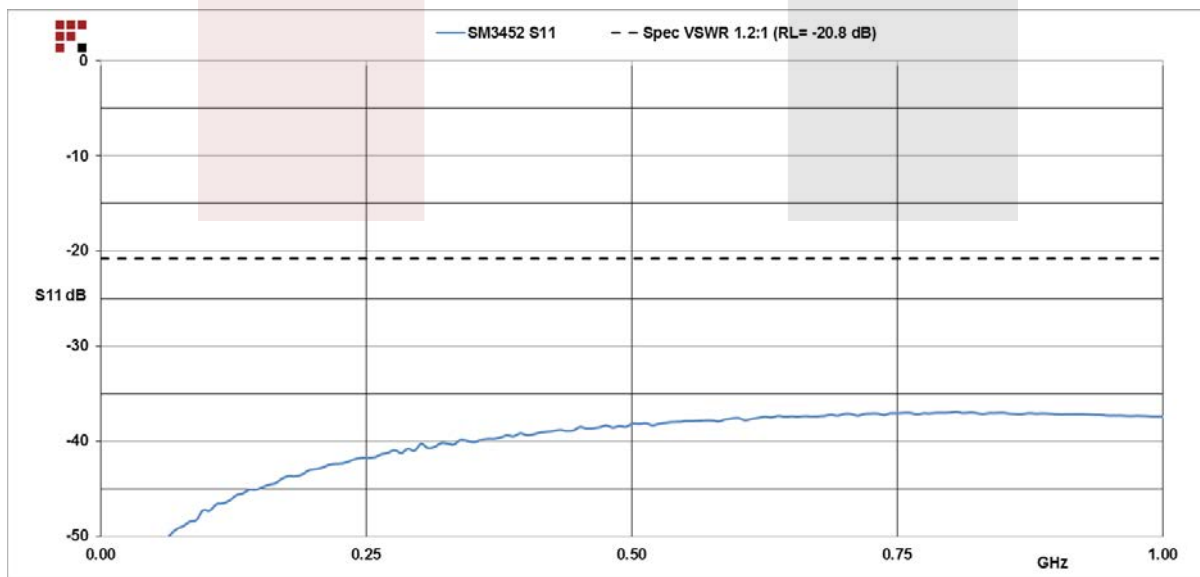


RA BNC Male to BNC Female Adapter from Fairview Microwave is in-stock and available to ship same-day. All of our RF/microwave products are available off-the-shelf from our ISO 9001:2008 certified facilities in Allen, Texas. Fairview Microwave is RF on-demand.

For additional information on this product, please click the following link: [RA BNC Male to BNC Female Adapter SM3452](#)

URL: <https://www.fairviewmicrowave.com/ra-bnc-male-bnc-female-adapter-sm3452-p.aspx>

The information contained in this document is accurate to the best of our knowledge and representative of the part described herein. It may be necessary to make modifications to the part and/or the documentation of the part, in order to implement improvements. Fairview Microwave reserves the right to make such changes as required. Unless otherwise stated, all specifications are nominal. Fairview Microwave does not make any representation or warranty regarding the suitability of the part described herein for any particular purpose, and Fairview Microwave does not assume any liability arising out of the use of any part or documentation.



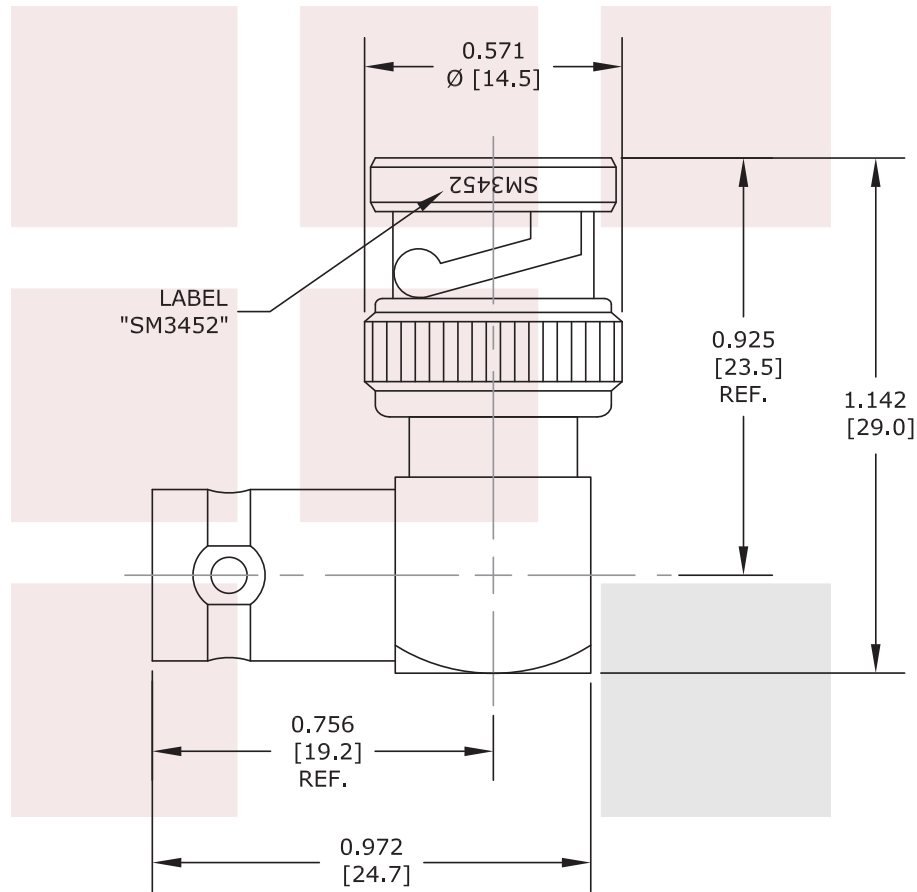

FAIRVIEW MICROWAVE INC. ALLEN, TX 75013 WWW.FAIRVIEWMICROWAVE.COM		NOTES: 1. UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE NOMINAL. 2. ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME. 3. DIMENSIONS ARE IN INCHES [mm].			
TITLE RA BNC Male to BNC Female Adapter		DWG NO SM3452		CAGE CODE 3FKR5	
CAD FILE	111715	SHEET	SCALE	N/A	SIZE A 150