


## Screen Printing Machine With T-Slot Worktable(GW-2030T)

Zoom

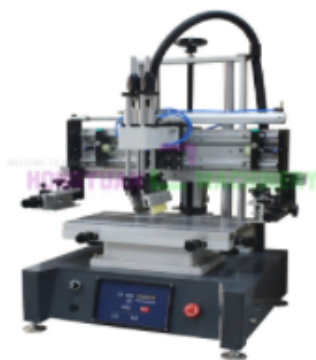

Model number: GW-2030T

Printing area: 200\*300MM

Printing speed: 1200pcs/Hr

Machine size: 700\*750\*850mm

Gross weight: 70kg

MOQ: 1set

Payment terms: T/T,Western Union,Paypal

Package way: plywood

Delivery way: by sea or by air

Lead time: within 7 workdays

Worktable size: 250\*400mm



Enquiry



Back

Describe

### Screen Printer With Vacuum Table/Plane screen printing machine for clothes

#### Application:

It is a small size flat screen printing machine with small profile, fast and steady printing speed. It can make up screen printing production line in small factory. It is suitable for printing products which surface is flat,such as paper,PVC sheet, mobile button, CD box, gift boxes etc

#### Function:

- 1.SCM IC complile action program
- 2.Auto 4-digit counter built-in
- 3.Airframe adopts coin alloy,and metal coating surface
- 4.distyle vertical constructure, high precision, steady operation
- 5.the transeversa stroke can be adjusted, spacing by Taiwan electronic switch
- 6.installing scraper constant pressure equipment to make sure pressure is steady when printing
- 7.the angle of scraper and reclaim blade can be adjusted randomly
- 8.you can regulate work-table back and forth or right and left, and then fastening it
- 9.you can regulate screen frame back and forth, right and left or level orientatio
- 10.T-slot work-table, installing conveniently
- 11.installing Taiwan CEC absorbers to removing shaken
- 12.The machine is running fastly,it is steady and low voice

#### Technical parameter:

- 1.max.printing area: 200\*300mm
- 2.printing speed: 1000-1200pcs/hr
- 3.power: 220V or 110V
- 4.work-table area: 250\*400MM
- 5.max.sreen frame size: 300\*500MM
- 6.max.height of printed products: 100MM